


# INSTALLATION SHEET

Any damaged or missing parts?

Parts will be shipped to you directly.

Call 866-900-8800, Mon - Fri, 8:30 a.m. - 5:00 p.m. CST  
or email [info@undercoverinfo.com](mailto:info@undercoverinfo.com)

**NOTE:** It is important that all the areas where the bed cover mounts to the truck are clean and free of debris before installation.


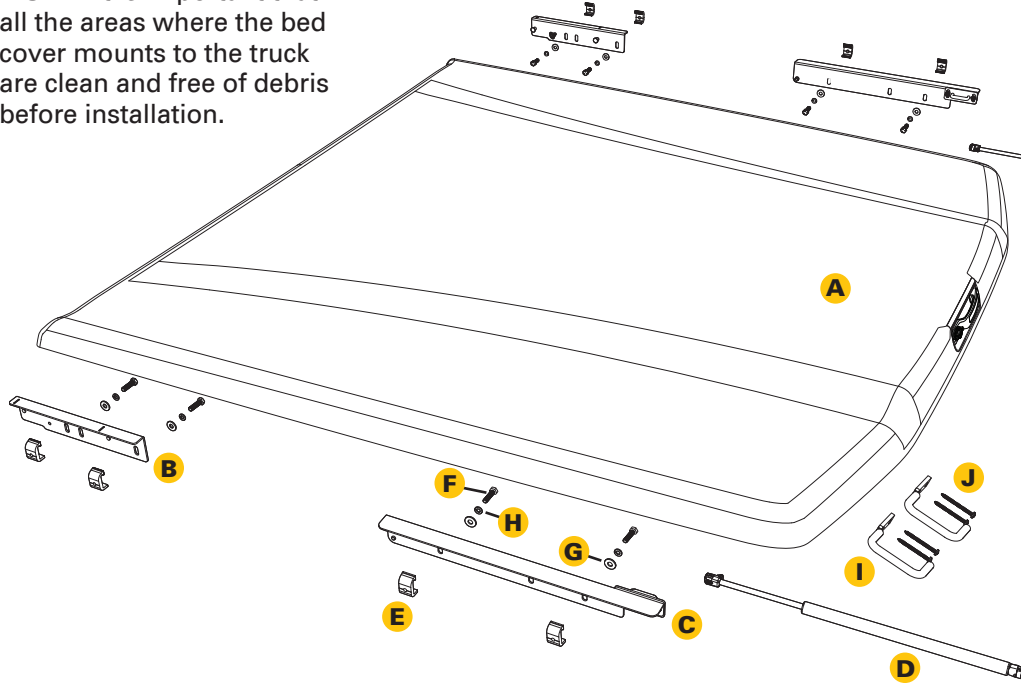


## TOOLS REQUIRED


- 7/16" wrench or socket
- 1/2" wrench or socket
- Utility knife

## PARTS INCLUDED IN YOUR KIT


- A** Truck bed cover
- B** 2x Rear mounting brackets
- C** 2x Front mounting brackets
- D** 2x Hydraulic struts
- E** 8x Clamps
- F** 8x Bolts
- G** 8x Washers
- H** 8x Lock washers
- I** 2x J-hooks
- J** 4x Wall mounting screws
- K** 4x Bar hinge with twist knobs  
*(pre-installed on the cover)*

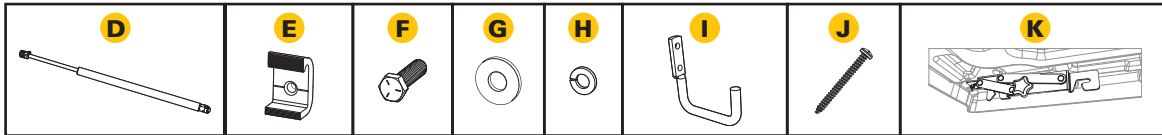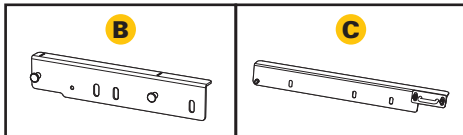


**1** If **NO** plastic drop-in bedliner is present, skip to step 2. Trucks that have plastic drop-in bedliners will require some minor trimming of the bedliner to ensure proper placement of the mounting brackets (B & C).

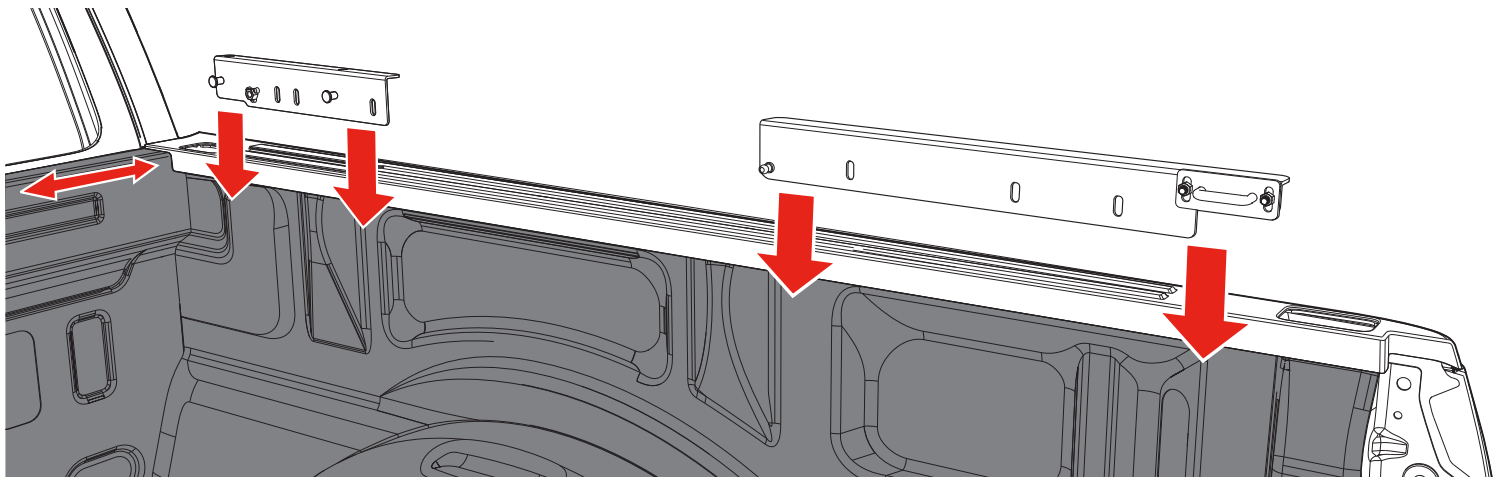


**2 REAR mounting brackets.** The rear bracket (B) should be installed on the truck bed rail near the tailgate. To determine the exact location, measure from the back side of the bulkhead to the front edge of the bracket. **The specific dimensions for your vehicle can be found on the measurement chart located on the back page of this instruction manual.**

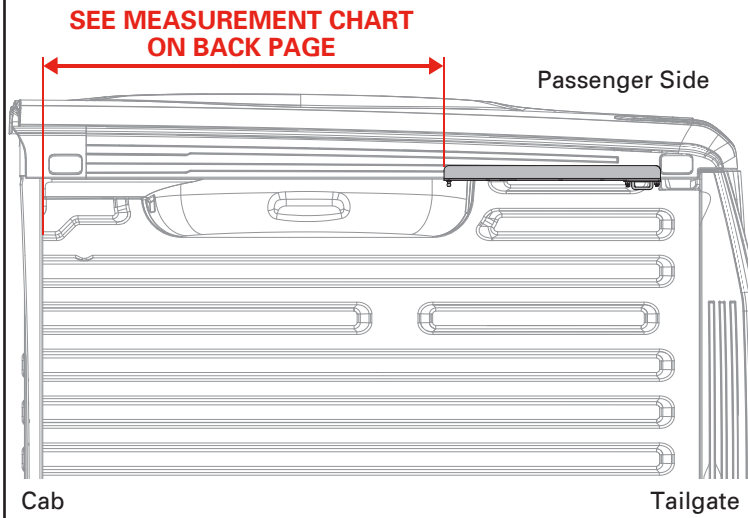


**3 REAR mounting brackets.** Use two clamps (E) per rear bracket (B). For each bracket, install one clamp in hole 1 by adding a bolt (F), washer (G), and lock washer (H) in this order, shown below. Then install another clamp in the hole nearest the tailgate that is not blocked by the truck bed. Do **NOT** overtighten and distort the brackets.

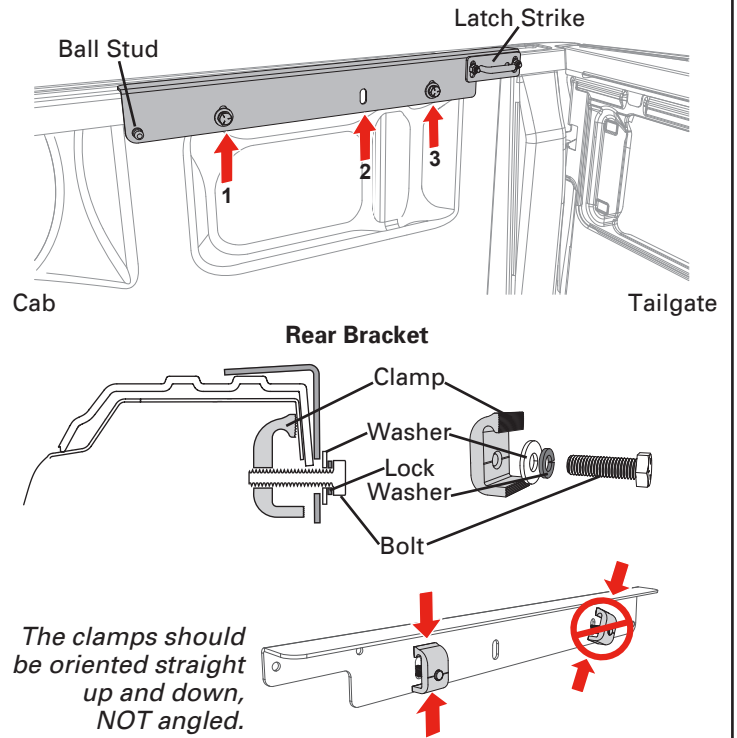

**4 FRONT mounting brackets.** The front bracket (C) should be installed on the truck bed rail near the bulkhead. To determine the exact location, measure from the back side of the bulkhead to the rear end of the bracket. **The specific dimensions for your vehicle can be found on the measurement chart located on the back page of this instruction manual.**




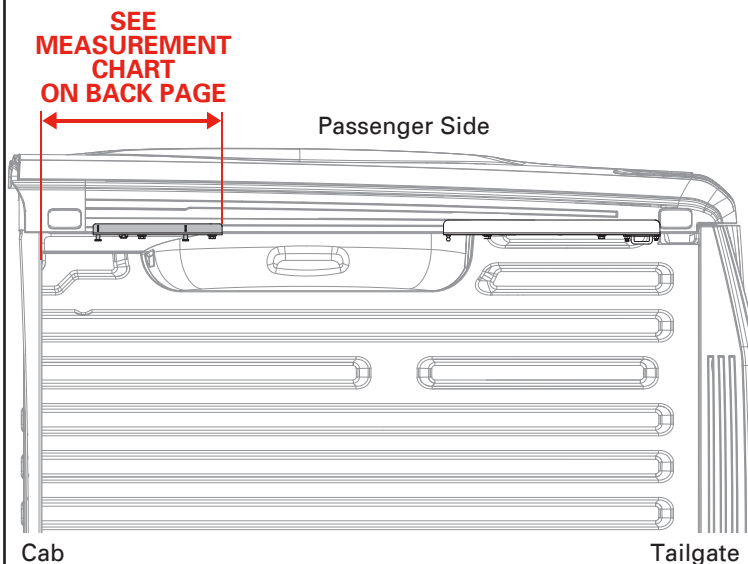


**5 FRONT mounting brackets.** Use two clamps per front bracket (C), install one clamp in hole 1 and one clamp in hole 3. If hole 3 is blocked by the truck bed, use hole 2.


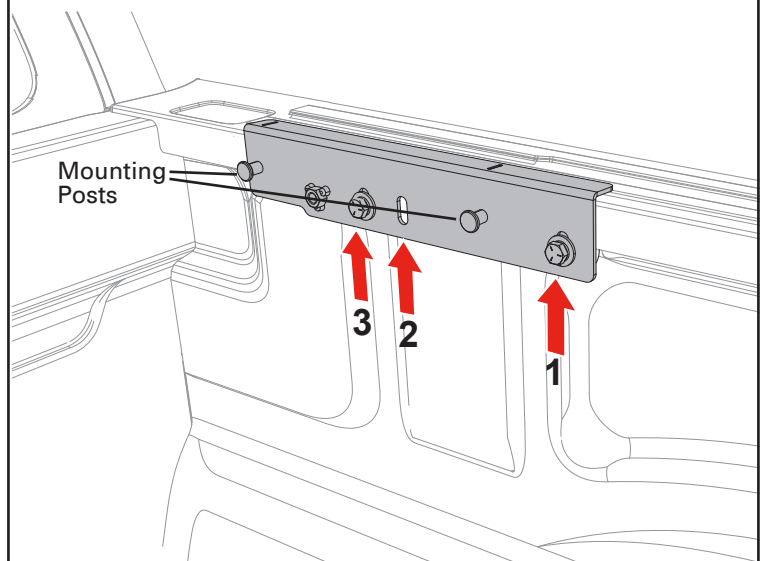


*The fit of the cover to the truck bed is determined by the front mounting brackets. This measurement is a good starting point. Unfortunately, not all truck beds are assembled 100% square, so some adjustments may be necessary after the cover is set on the truck.*




**6 Install Cover.** With some assistance, set the bed cover (A) on the truck bed. Slide the slots in the four bar hinges (K) (attached to the cover) over the posts on the front mounting brackets (C). Push the cover forward to lock the hinges to the mounting brackets.

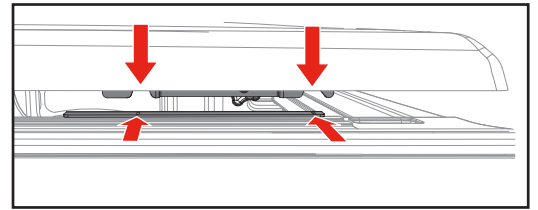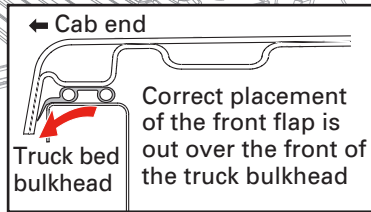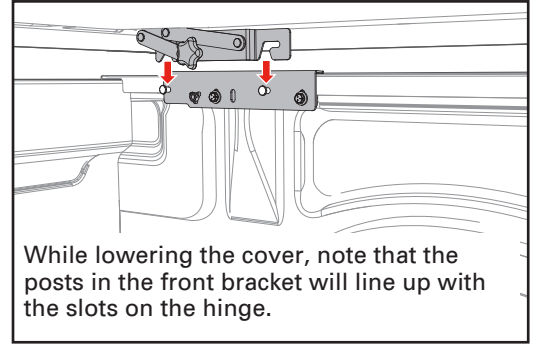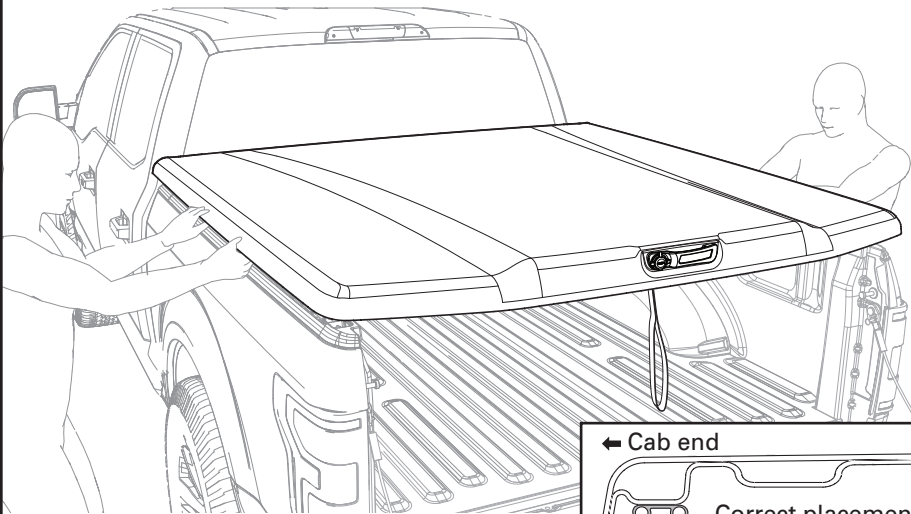


**7 Install Cover.** Once the cover (A) is in place tighten the twist knobs (K) on both the driver and passenger sides.

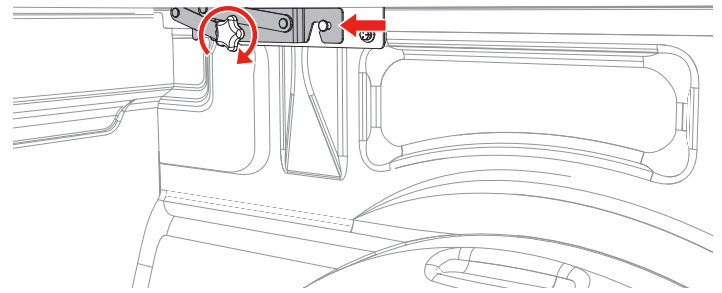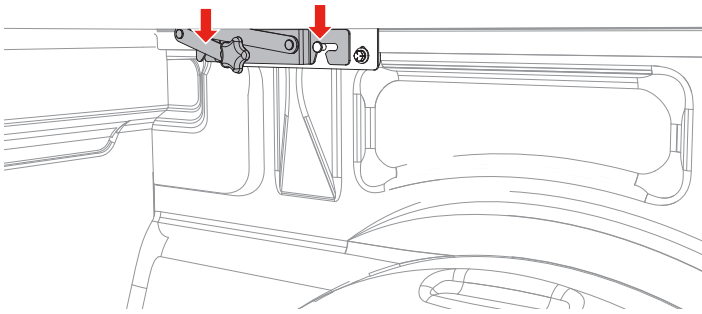


**8 Install Cover.** To install the hydraulic struts (D) attach the large cylinder end of the strut to the cover (A) and the rod end to the rear mounting bracket (B). They will snap into place, no tools are needed.

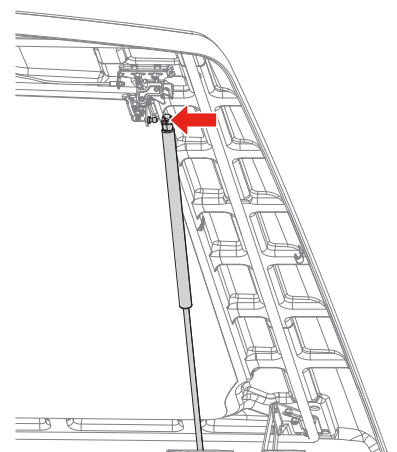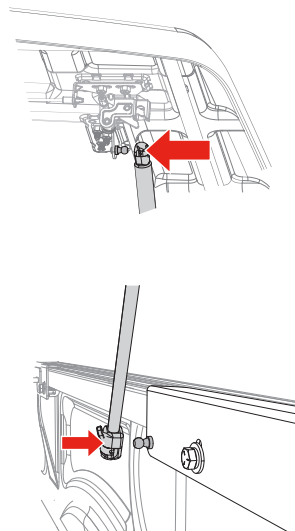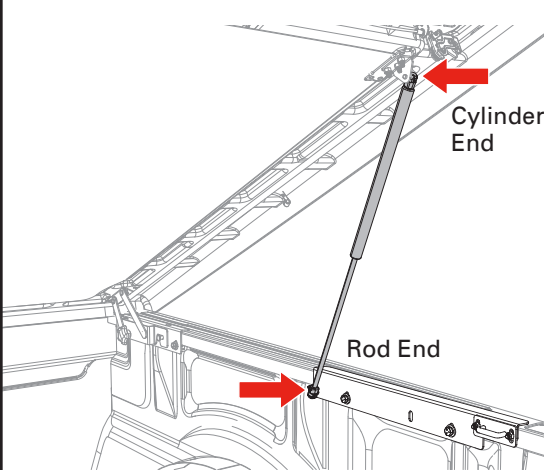


- 9 Install Cover.** With the cover (A) closed, check the fit to make sure it is not touching the bed on either side or the tailgate. The desirable gap is no less than 1/8" and no more than 3/8" to 1/2".

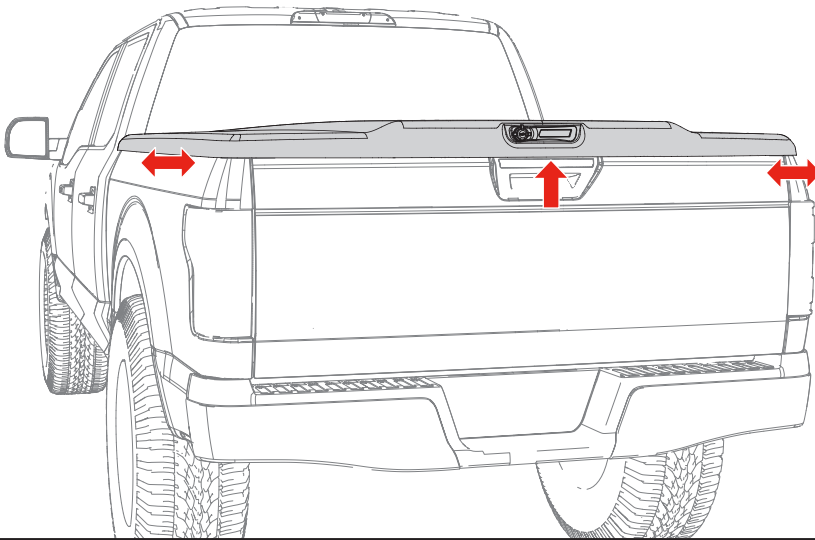


- 10 Install Cover.** To adjust the cover (A) from front to back to be more even, loosen the clamps (E) and move both of the front brackets (C) forward or rearward accordingly. To adjust to one side or the other, move the front brackets forward or rearward independently. Retighten all of the clamps.

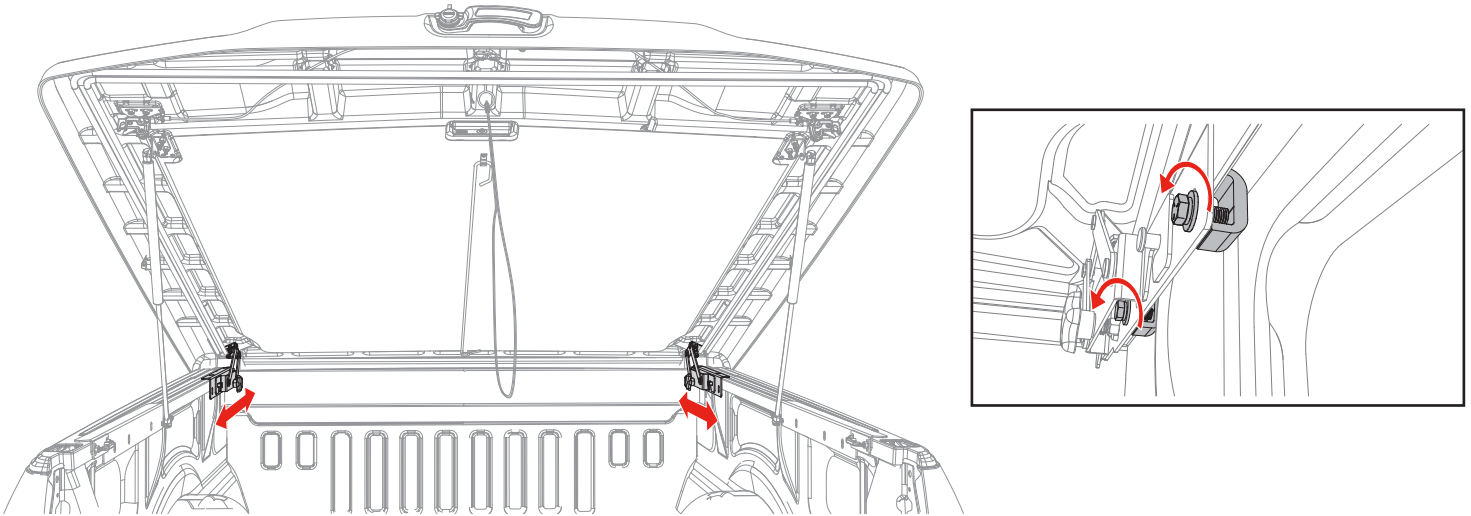


- 11 Final adjustments.** Be sure the front flap hangs over the bulkhead of the truck. The latch strike can be adjusted by loosening the two nuts and moving the strike up or down to make better contact with the latch. The rotary latch can be adjusted by loosening the two nuts and moving the latch in or out to make better contact with the strike.

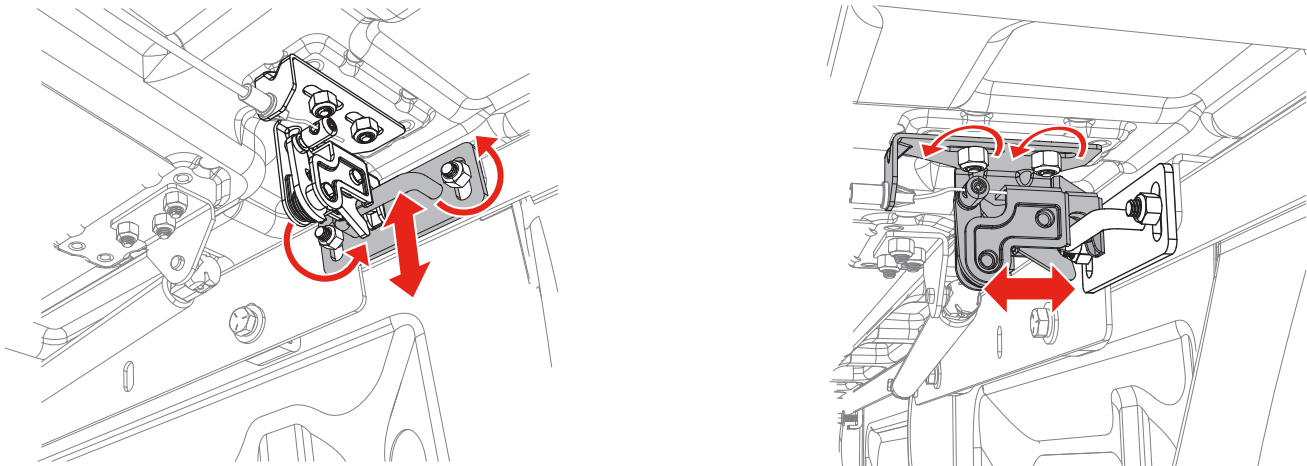


## Removing the Cover

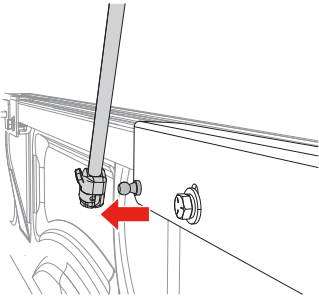


Release the strut (D) off of the ball stud, and be sure to secure the cover (A) to prevent it from closing unexpectedly.

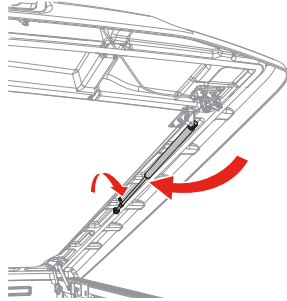

Place the loose end of the strut (D) in the storage clip. Repeat on the opposite side.

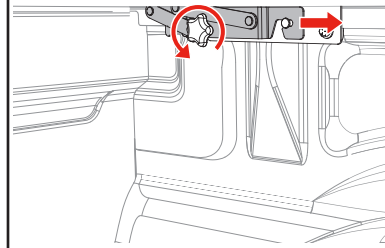


Then turn the twist knobs (K) until they release.

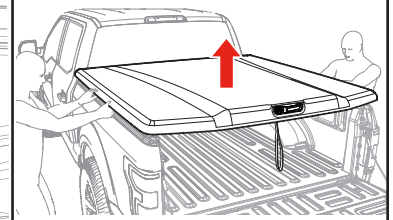


Next, pull the cover (A) rearward, releasing the hinge from the mounting brackets (B & C), and lift the cover off.


## Re-Installing the Cover

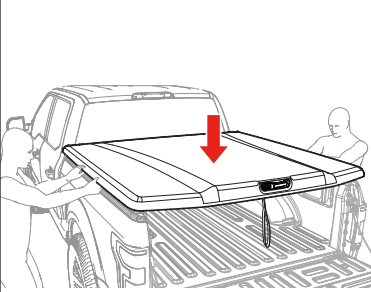


Place the truck bed cover (A) on the truck.

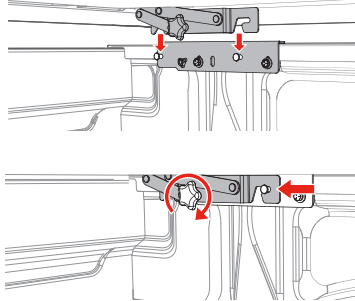

Slide the slots in the 4 bar hinges (attached to the cover) over the posts on the front mounting brackets. Then push the cover forward to lock the hinges to the mounting brackets.

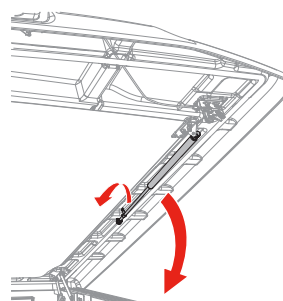


Lift the cover (A) from the rear and tighten the twist knobs (K) on both left and right hinges.

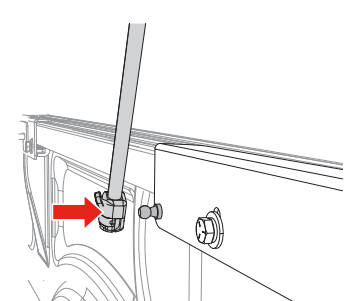


Next, re-install the struts (D).

## Wall Hanging Instructions

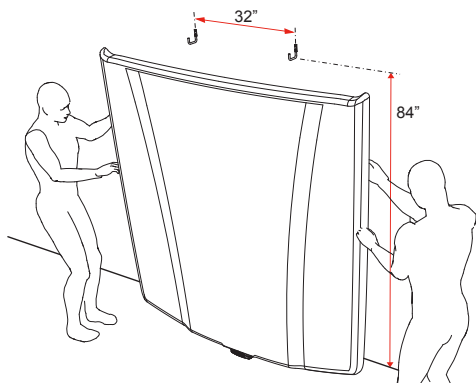

Before removing the cover (A), mount the two J-Hooks (I) with the mounting screws (J) provided, on the garage wall. The hooks must have a minimum height from the floor of 84". Center horizontally 32" apart from each other. For long bed trucks mount 98" from the floor. Then remove the cover from the truck bed.

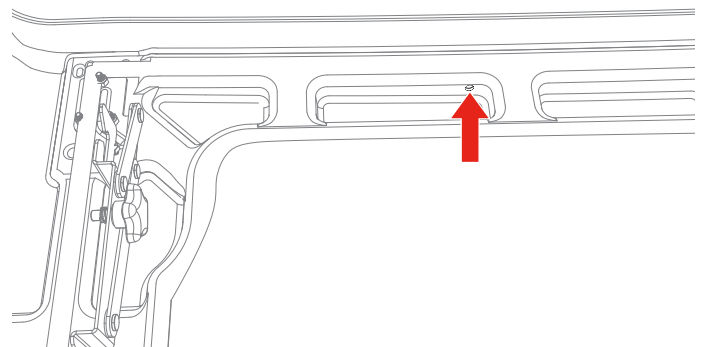

Finally, hang the cover vertically by locating the two holes on the underside of the cover. With the cover facing away from the wall, carefully align the holes in the cover with the hooks on the wall. Gently lift the cover and slide the hooks through the holes until they are fully inserted.

# WARRANTY

Thank you for purchasing a RealTruck UnderCover truck bed cover. RealTruck Enterprise, Inc. is proud to have you as a customer and believe you will be pleased with the years of service your RealTruck UnderCover will provide. Please take a few moments to review this warranty information and be sure to complete the online registration.

## TERMS OF THIS WARRANTY

RealTruck Enterprise, Inc. warrants the structure of your RealTruck UnderCover tonneau cover to be structurally free from defects in material and workmanship for the life of your purchase. The gas/hydraulic lift struts and mounting hardware are warranted to be free from defects in material and workmanship for **one (1) year** from the retail date of purchase or delivery. This warranty applies only to the original purchaser, only when purchased from an authorized RealTruck UnderCover dealer and is nontransferable. Your original sales receipt will serve as proof of purchase for this warranty. This warranty only applies to the original truck or original installation. Before credit can be issued on a warranty claim, proof of defect may be required in the form of pictures. This will be determined at the time of claim.

## UNDERCOVER LIFETIME STRUCTURE WARRANTY

RealTruck Enterprise, Inc. warrants the ABS polymer structure of your RealTruck UnderCover tonneau cover to be structurally free from defects in material and workmanship for the life of the product.

## UNDERCOVER LIFETIME PAINT WARRANTY

RealTruck Enterprise, Inc. warrants, for life of the product, that the exterior paint will not abnormally fade or peel, due to material or workmanship defect, faster than the original pickup it was installed on. RealTruck UnderCover tonneau covers not painted at the RealTruck UnderCover factory are excluded from this warranty. RealTruck Enterprise, Inc. does not guarantee a 100% paint match. Due to variables from one truck's paint to another, some variance is to be expected.

## EXCLUSIONS OF THIS WARRANTY

Not covered under this warranty is failure due to neglect; improper installation including any modifications to installation hardware; operating the truck with your RealTruck UnderCover in the open position; alterations; addition of equipment; abuse; accident; weather related damage; exposure to chemicals that are not labeled "safe for plastics"; and normal wear and tear from lack of maintenance. Paint damage is not covered under the Terms of this Warranty.

**CAUTION. DO NOT ATTEMPT TO DRIVE WITH YOUR COVER IN THE OPEN POSITION OR TIE DOWN YOUR COVER WHILE IN THE OPEN POSITION. WHEN HAULING MATERIAL THAT IS TALLER THAN THE TRUCK BED HEIGHT, REMOVE THE COVER, STORE IT, THEN PROPERLY HAUL OVERSIZED MATERIAL. TYING THE COVER DOWN WHEN OPEN WILL CAUSE SEVERE STRESS TO THE FRONT HINGES AND COULD CAUSE ONE OR BOTH OF THE HINGES TO CRACK AND POSSIBLY FAIL. THIS TYPE OF DAMAGE IS NOT CONSIDERED A MANUFACTURER DEFECT AND IS NOT COVERED BY THIS WARRANTY.**

WHEN IN THE CLOSED POSITION, YOUR TONNEAU MUST BE LOCKED AND THE TAILGATE MUST BE CLOSED. FAILURE TO DO SO COULD CAUSE SUDDEN OPENING OF THE TONNEAU COVER FROM UNEXPECTED HEAVY WINDS, WHICH MAY RESULT IN DAMAGE TO THE TRUCK, YOUR TONNEAU COVER, AND/OR OTHER PROPERTY, AND MAY RESULT IN BODILY INJURY.

## OWNER RESPONSIBILITIES

Incidental or consequential damage or loss of contents due to use, neglect, lack of maintenance, misuse, or abuse of a RealTruck UnderCover tonneau is the sole responsibility of the truck owner and operator. Paint wear to the truck's bed can happen with the use of any truck bed cover, and is the sole responsibility of the truck owner. Clear paint protective films may be used to help prevent possible paint damage. Ask your dealer for other recommendations. Paint damage to your truck is not covered under this warranty. Inspect your truck periodically for rubbing. If you notice any rubbing, immediately remove your cover and contact your dealer. An adjustment to your brackets may be necessary to protect from further damage. It is the responsibility of the truck owner to report any damage that is occurring to your dealer. This will greatly limit any damage and make needed repairs much less extensive. Always read the ingredients of any product you are using to clean your RealTruck UnderCover tonneau. Use only products that are safe for use with plastics. Many chemicals contain material that will permanently discolor your tonneau. This is not considered a manufacturer defect.

## REPAIR AND REPLACEMENT

In the event that your RealTruck UnderCover tonneau is found to be defective under the terms of this warranty, it is at the discretion of RealTruck Enterprise, Inc. to repair or replace the defective part. All repairs must be made by an authorized RealTruck UnderCover dealer or under direction of RealTruck Enterprise, Inc. In the case of either event, RealTruck Enterprise, Inc. is not responsible for any transportation costs associated with the warranted claim.

**LIMITATION OF LIABILITY:**

THE REMEDIES DESCRIBED ABOVE ARE THE SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL, OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, IN WHICH CASE THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY.

**MAINTENANCE & CARE**

The ABS polymer body of your RealTruck UnderCover requires only periodic cleaning with mild car wash soap. ONLY USE CLEANERS, WAXES, OR PRODUCTS THAT ARE LABELED, "Safe for use on plastics". Do not let chemicals or substances come into contact with your RealTruck UnderCover, unless labeled "Safe for plastics". Avoid use of abrasive type cleaners as they may dull the finish. Be sure that products, such as insecticides, do not get on the cover from contact with your hands or other parts of your body. This could cause serious damage and discoloration.

**REGISTER YOUR WARRANTY AT REALTRUCK.COM/WARRANTY-REGISTRATION/**

It only takes a couple of minutes to complete & it streamlines the warranty procedure.

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

**MEASUREMENT CHART - FROM STEP 2 & 4**

Refer to the chart below for specific model front and rear bracket measurement placement.

| MAKE/MODEL  | BED LENGTH | YEAR  | REAR MOUNTING BRACKET | FRONT MOUNTING BRACKET |
|-------------|------------|-------|-----------------------|------------------------|
| <b>FORD</b> |            |       |                       |                        |
| F-150       | 5.5' Bed   | 09-14 | 39 7/8"               | 17 1/8"                |
| F-150       | 6.5' Bed   | 09-14 | 52"                   | 18 1/4"                |
| F-150       | 5.5' Bed   | 15-20 | 39 1/2"               | 16 3/4"                |
| F-150       | 6.5' Bed   | 15-20 | 51 1/2"               | 17"                    |
| F-150       | 5.5' Bed   | 21+   | 40 1/4"               | 17 1/4"                |
| F-150       | 6.5' Bed   | 21+   | 51 1/4"               | 17 1/4"                |
| Super Duty  | 6.8' Bed   | 17-22 | 56 1/4"               | 16 1/2"                |
| Super Duty  | 6.8' Bed   | 23+   | 55 3/4"               | 17"                    |